
SETUP INSTRUCTIONS FOR 84" TO 100" BAR

NOTES


STEP 1

LAY DOWN THE BAR'S 4 FRONT PANELS AS SHOWN. THE LABELS ARE ALSO SHOWN ON THE DIAGRAM TO THE RIGHT. YOUR WORK NEEDS TO MATCH WHAT IS SHOWN. THE LABELS 'D' SHOULD BE FACING THE FLOOR. ALL ELSE SHOULD BE FACING UP.

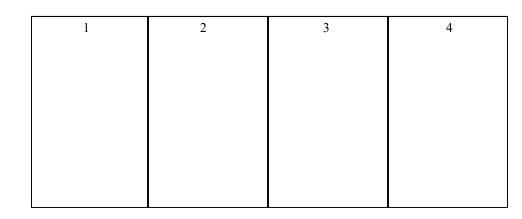

STEP 2


INSTALL THE BAR'S 4 SUPPORTING RAILS AS SHOWN (T1, T2, B1, B2). USE 1.25" SCREWS AND INSTALL TO PREDRILLED LOCATIONS

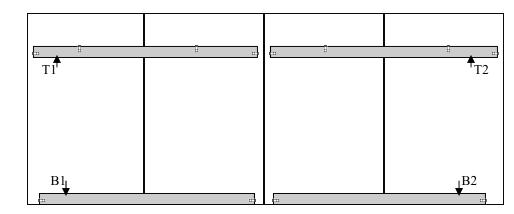

STEP 3


INSTALL THE BAR'S 3 SUPPORTING PANELS (S1, S2, S3). USE 3/4" SCREWS AND INSTALL TO PREDRILLED LOCATIONS.

NOTE: IF YOU REQUESTED YOUR SHELVES TO BE ON ONE SIDE VS. THE OTHER, YOUR S1 AND S3 MAY BE REVERSED, BUT FOLLOW THE SAME PROCEDURE AS SHOWN,

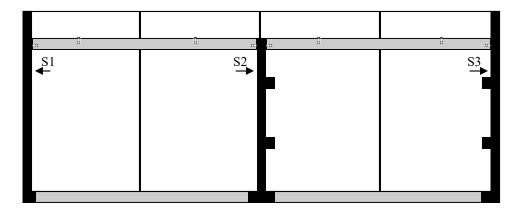


STEP 4

STAND THE BAR UP, AND SLIDE IN THE PROVIDED SHELVES.

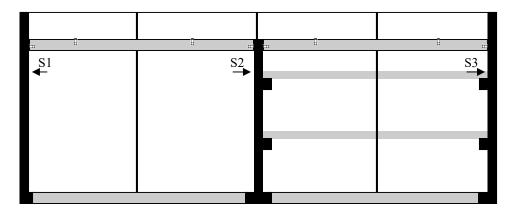

STEP 5
INSTALL THE BAR TOP. USE 3/4" SCREWS
AND INSTALL TO PREDRILLED
LOCATIONS.

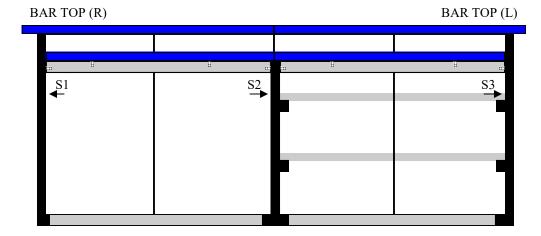

NOTES		