

SETUP INSTRUCTIONS FOR 120" BAR WITH SIDE EXTENSION ON BTL

NOTES


STEP 1
LAY DOWN THE BAR'S 5
FRONT PANELS AS
SHOWN. THE LABELS ARE
ALSO SHOWN ON THE
DIAGRAM TO THE RIGHT.
YOUR WORK NEEDS TO
MATCH WHAT IS SHOWN.
THE LABELS 'D' SHOULD
BE FACING THE FLOOR.
ALL ELSE SHOULD BE
FACING UP.

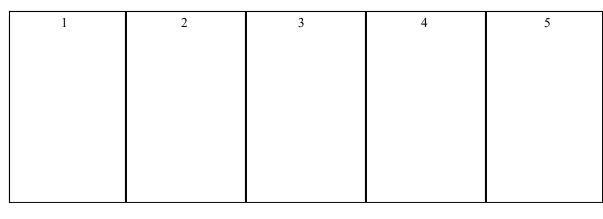


STEP 2 INSTALL THE BAR'S 9 SUPPORTING RAILS AS SHOWN (T1, T2, T3, B1, B2, B3). USE 1.25" SCREWS AND INSTALL TO PREDRILLED LOCATIONS

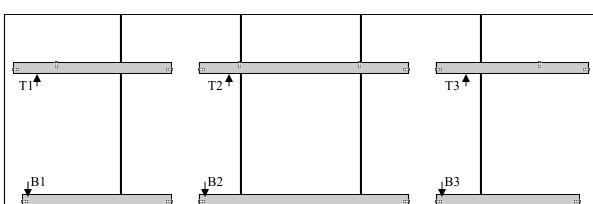


STEP 3 INSTALL THE BAR'S 4 SUPPORTING PANELS (S1, S2, S3, S4). USE 3/4" SCREWS AND INSTALL TO PREDRILLED LOCATIONS

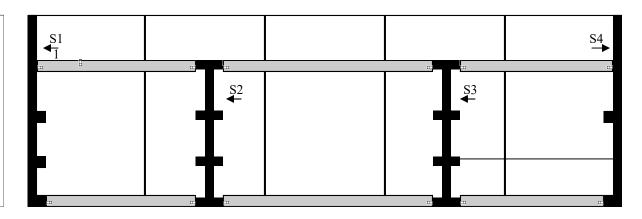

STEP 4 STAND THE BAR UP, AND SLIDE IN THE PROVIDED SHELVES.

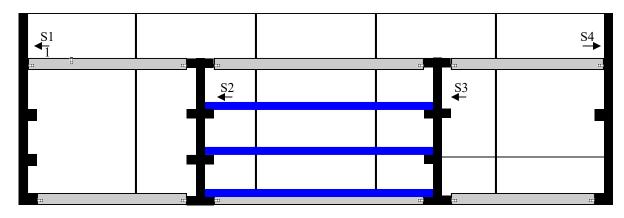

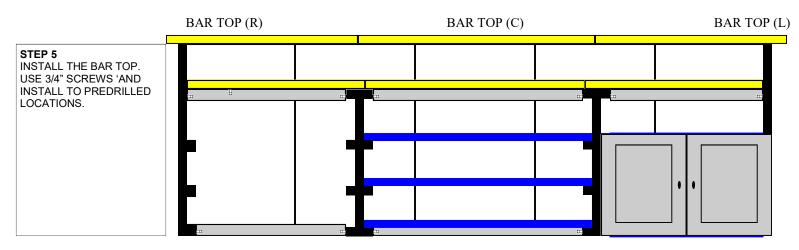

CABINET DOORS NOT ON EVERY MODEL

NOTES	