


SETUP INSTRUCTIONS FOR RIGHT SIDE EXTENSION (POV BARTENDER)

NOTES:


STEP 1

PANEL S3, (OR S4, IF YOU HAVE ONE) WILL HAVE 2 PREDRILLED HOLES ON THE RIGHT EDGE. THIS INDICATES WHERE THE SIDE EXTENSION BEGINS. INSTALL MENDING PLATES INTO THE APPROPRIATE LOCATIONS USING 3/4" SCREWS INTO THE PREDRILLED HOLES.

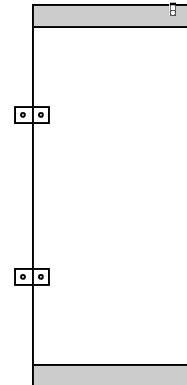

STEP 2

LAY PANELS L1 AND L2 DOWN ON THE FLOOR AS SHOWN.

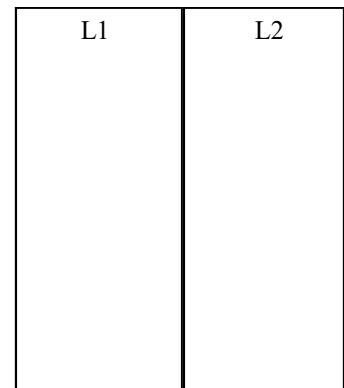

STEP 3


INSTALL 2 SUPPORT BRACKETS, M1, M2 AS SHOWN USING SCREWS 1.25" SCREWS INTO THE PREDRILLED HOLES.

STEP 4

INSTALL MENDING PLATES ON MAIN BAR TOP AND SIDE EXTENSION BAR TOP WHERE THEY JOIN USING 3/4" SCREWS INTO THE PREDRILLED HOLES

STEP 5

JOIN ASSEMBLY TO MAIN BAR AT MENDING PLATES USING 3/4" SCREWS.

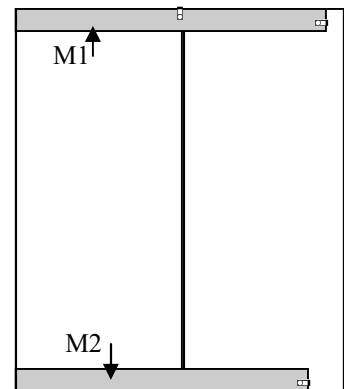

STEP 6

INSTALL THE PANEL LABELED N1 AS SHOWN USING 3/4" SCREWS INTO THE PREDRILLED HOLES

STEP 7

INSTALL THE SIDE EXTENSION'S BAR TOP. JOIN USING MENDING PLATES AND 3/4" SCREWS AS PROVIDED INTO THE PREDRILLED HOLES.

