


SETUP INSTRUCTIONS FOR LEFT SIDE EXTENSION (POV BARTENDER)

NOTES:


STEP 1

PANEL S1, WILL HAVE PREDRILLED HOLES ON THE PANEL'S EDGE. THIS INDICATES WHERE THE SIDE EXTENSION BEGINS. INSTALL MENDING PLATES INTO THE APPROPRIATE LOCATIONS USING 3/4" SCREWS 'INTO THE PREDRILLED HOLES.

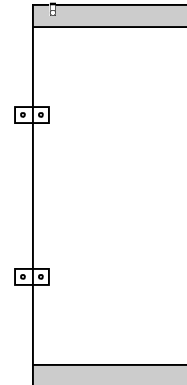

STEP 2

LAY PANELS L1 AND L2 DOWN ON THE FLOOR AS SHOWN.

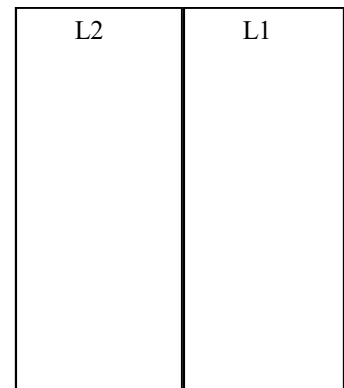

STEP 3


INSTALL 2 SUPPORT BRACKETS, M1, M2 AS SHOWN USING 1.25" SCREWS INTO THE PREDRILLED HOLES.

STEP 4

INSTALL MENDING PLATES ON MAIN BAR TOP 3/4" SCREWS

STEP 5

JOIN ASSEMBLY TO MAIN BAR AT PANEL S1

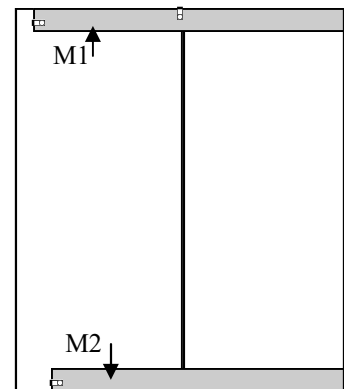

STEP 6

INSTALL THE PANEL LABELED N1 AS SHOWN USING 3/4" SCREWS 'N' INTO PREDEILLED POSITIONS.

STEP 7

INSTALL THE SIDE EXTENSION'S BAR TOP. JOIN USING MENDING PLATES FROM STEP 4 AND CORNER BRACKETS USING SCREWS M, R, Q, IN POSITIONS RESPECTIVELY LABELED. INSTALL PROVIDED MENDING PLATE WITH SCREWS 'R' IN LOCATIONS LABELED 'R'.

