


## SETUP INSTRUCTIONS FOR 72" Side Extension (Right Side)

NOTES

### STEP 1


#### STEP 1

PANEL S1 WILL HAVE 2 POSITIONS PREDRILLED ON THE LONG EDGE. INSTALL MENDING PLATES USING 3/4" SCREWS INTO PREDRILLED LOCATIONS.

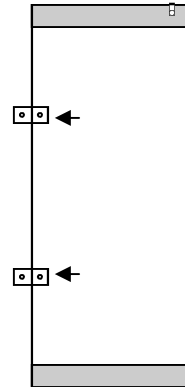

### STEP 2

LAY PANELS L1, L2 AND L3 DOWN ON THE FLOOR AS SHOWN.

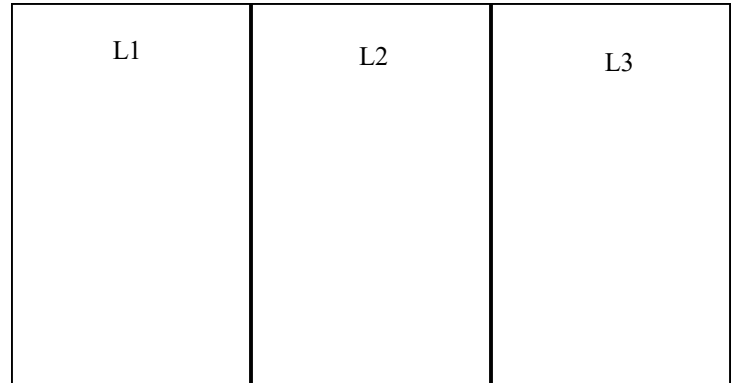

### STEP 3


INSTALL 4 SUPPORT BRACKETS, M1, M2, M3 AND M4 AS SHOWN USING 1.25" SCREWS INTO PREDRILLED LOCATIONS.

### STEP 4

INSTALL MENDING PLATES ON MAIN BAR TOP USING 3/4" SCREWS INTO PREDRILLED LOCATIONS.

### STEP 5

JOIN ASSEMBLY TO MAIN BAR AT STEP 1 USING 3/4" SCREWS.

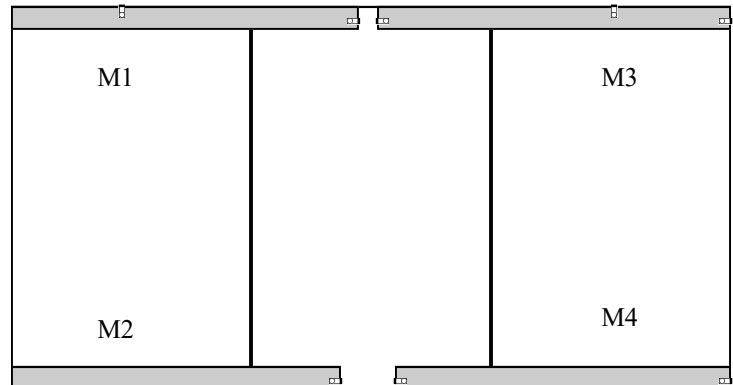

### STEP 6

INSTALL THE PANELS LABELED N1, N2 AS SHOWN USING 3/4" SCREWS INTO PREDRILLED LOCATIONS

### STEP 7

INSTALL THE SIDE EXTENSION'S BAR TOP(S). JOIN USING MENDING PLATES AND 3/4" SCREWS.

